

Get *Started*

 
All you need to know to get going.



Transform™ Ultra



Welcome!

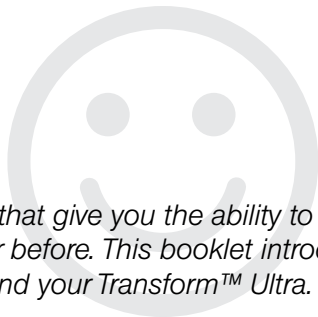

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your Transform™ Ultra.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your phone.

Using This Guide

This Get Started guide is designed to help you set up and use your new Transform Ultra. It's divided into four sections to help you find the information you need quickly and easily.

■ Get Ready — page 1 — *Find out what you need to do before you use your device the first time, including inserting a battery and activating Sprint service on your device.*

■ Android Basics — page 4 — *Learn some basics about how to move around on your device, use the home screen, and enter text. If you're familiar with Android devices, you can probably skip these pages (although a refresher course never hurt anyone).*

■ Use Your Device — page 13 — *Take advantage of your device's features and Sprint services, from the basics (Making Calls) to the more advanced (using Android Market, Qik, and more).*

■ Tools & Resources — page 32 — *Find useful tips for your device and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your Transform Ultra



Get Your Device Ready

Install the Battery

1. Remove the battery compartment cover on the back of the device.
2. Align the battery's contacts with those inside the battery compartment and gently press down until the battery is seated.
3. Replace the back cover.

Charge the Battery

1. Insert the USB cable into the charging head.
2. Insert the small end of the USB cable into the Charger/Accessory Jack.
3. Plug the charging head into a standard AC power outlet.



Turn the Device On

- Press and hold .

Unlock the Screen

- Drag  to the right to unlock.

Switch to Spanish Menu (optional)

1. Press  >  and tap Settings > Language & keyboard.
2. Tap Select language > Español.

Activate Your Device

Activate Your Device

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail, and it is for a new Sprint account or a new line of service, your device is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.

Activate on your computer:

- Go to sprint.com/activate and follow the instructions.

Activate on your phone:

***Note:** For security reasons, you will need your Sprint phone number and PIN to use this activation method.*

1. Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.

***Note:** Your phone will need to complete one hands-free activation attempt before you can continue.*

2. Tap **Activate** to override auto-activation and start the manual activation wizard.

***Note:** If you don't override Hands-Free Activation, your phone will attempt to auto-activate five times. Wait for Retry to appear on your screen. Tap Retry and then tap Activate.*



3. Follow the on-screen prompts to complete the activation process.
4. After you have completed the wizard, make a phone call to confirm your activation.

If your phone is still not activated, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Sprint ID lets you instantly personalize your phone with mobile ID packs featuring apps, ringtones, wallpapers, widgets, and more, customized to suit your lifestyle. ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Sprint ID. You can easily switch from one ID Pack to another without losing any applications already installed.


Install Your First ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. From the home screen, tap .
2. On the Welcome to Sprint ID screen, tap **Continue**.
(If the lock screen appears, unlock it by dragging the UNLOCK icon  to the right side of the screen.)
3. Tap **Get New** on the Choose your ID screen.
(My ID is the default ID Pack.)
4. Tap an ID Pack on the Sprint ID screen.

5. Read the information screen for a description of the ID Pack and tap **Install**.
6. Read the Terms & Conditions and tap **Agree**.
7. Wait for the download and install to finish. (If prompted, tap **Complete Install**.)
8. Tap **OK**.

Switch ID Packs

1. Press  > .
2. Tap an ID Pack to replace your current pack.

—or—

Tap **Get New** to install a new ID Pack and follow steps 4-8 of “Install Your First ID Pack.”

Note: Certain features of Sprint ID are subject to change. For the most up-to-date information about using Sprint ID, see the User Guide at sprint.com.

Android Basics: Getting Around Your Device

Move Around Your Device's Menus and Screens Using Gestures

Your device's touchscreen lets you control everything through various types of touches, or gestures.

Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Press and hold: To display the available options for an item simply touch and hold the item.

Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.



Swipe or slide: Quickly drag your finger vertically or horizontally across the screen.

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Swype: This unique feature allows you to enter a word by sliding a finger from letter to letter, lifting only between words. See page 10 for instructions on using this text input method.



Swipe, Slide
or Drag




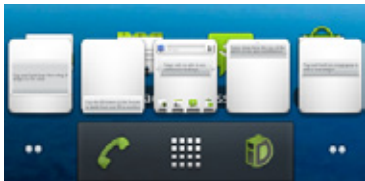 
Swype

Your Home Screen

Viewing Your Home Screen

Your device's Home screen extends horizontally to five full screens. This gives you room to customize your device and put the things you need front and center, just a swipe away.

- To display the main (center) Home screen, press  from any screen.
- To view extended screens, swipe the screen left or right. There are two additional screens on each side of the main Home screen.
- To display thumbnails of all five screens, press and hold one of the extended screen icons. Tap a thumbnail to display the screen.



Status Bar

The status bar at the top of the Home screen lets you quickly see both your device status (connections, signal strength, battery, GPS) and any current notifications.

 
Notification area




Notifications Panel



You can expand the notification area to provide more detailed information about the current onscreen notification icons.

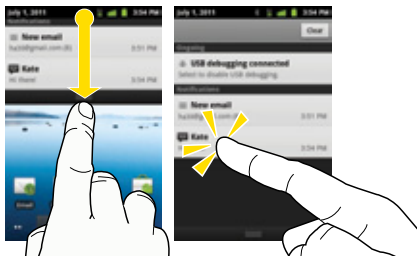1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
2. Tap a notification entry to open the associated application.



Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **More > Notifications**.

Customize Your Home Screen

1. Press  >  and tap **Add**.
2. On the Add to Home screen, touch the item you wish to add (**Shortcuts, Widgets, Folders, or Wallpapers**).

For example, to add a Power Control widget:

 
1. From the Add to Home screen, tap **Widgets > Power Control**.
2. If the widget is too large for the free space on the screen, slide to a screen with sufficient space, and repeat step 1.

From your new Power Control widget, you can turn wireless capabilities (WiFi, Bluetooth, GPS, Sync, Brightness) on and off, and adjust the screen brightness.

Buttons and Keys



Transform Ultra Buttons and Keys

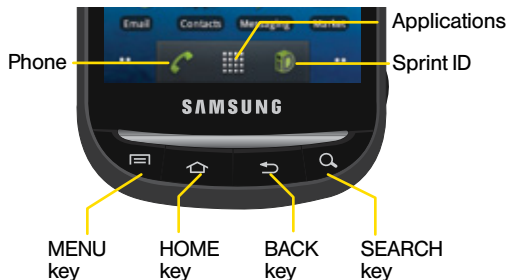 
The bottom front of your device contains a row of four static keys that let you perform specific functions. Above the buttons, there is a program-dependent row of keys (they're always available from the unlocked Home screen).



- **Menu Key** (☰) – Press to open context-specific menus.
- **Home Key** (🏠) – Press to return to the main Home screen.
- **Back Key** (↶) – Press to return to the previous screen view.
- **Search Key** (🔍) – Press to launch a search within the current screen or application.
- **Phone Button** (📞) – Tap to open the phone screen.
- **Applications Button** (📑) – Tap to display the applications list.
- **Sprint ID Button** (🆔) – Tap to add, remove, and switch between ID packs.


Open Applications

 
- If an application is on one of your Home screens, just tap it to open it.
- If an application is not available from your Home screen, press  (if you're not already on the Home screen), tap  to display the applications list, and then tap the application from the alphabetical list. You may have to scroll down to find the application you're looking for.

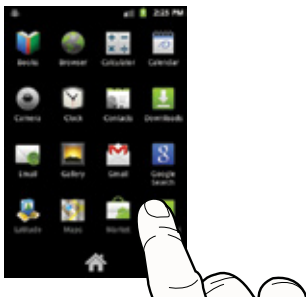

Access Recently-Used Applications

Your device keeps a running list of your eight most recently used applications.

1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.

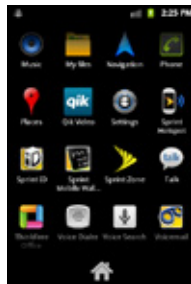


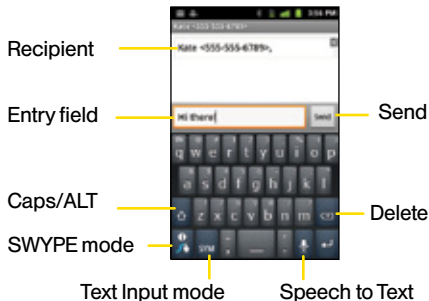 
Entering Text With the Onscreen Keyboard

Your QWERTY Keyboards

There are two versions of onscreen keyboards available on your Transform Ultra: the Android keyboard and Swype (default), which uses a unique gliding method to let you enter whole words quickly. When you select a field that requires text or numbers, an onscreen keyboard will appear so you can enter the information, or type your message. (If you don't see the keyboard when, for instance, you're entering contact information, just touch the field you're working on to bring it up.) The device's onscreen QWERTY keyboards can be used in either portrait or landscape mode.


Text Entry with Your Swype Keyboard

1. Touch an onscreen character, and then, while maintaining your finger onscreen, drag to the next character in the desired word.
2. Repeat this process until the desired characters have been drawn over. Select from an onscreen list of possible word matches (if prompted). This occurs if your current swype has generated more than one possible word match. For tips on using Swype, touch  and follow the onscreen information.



Your Swype Keyboard Settings

You can customize your onscreen keyboard settings to suit your needs:

Press  and tap **Settings > Language & keyboard > Swype** to select your Swype settings:

Preferences:

- **Language** allows you to select the current text input language. Default language is US English.

- **Audio feedback** turns on/off sounds generated by the Swype application during use.
- **Vibrate on keypress** activates a vibration as you enter text.
- **Enable tip indicator** turns on an onscreen flashing indicator that provides helpful usage information.

 
Swype Advanced Settings:

- **Word suggestion** suggests words during typing.
- **Auto-spacing** automatically inserts spaces between words. When you finish a word, just lift your finger to start the next word.
- **Auto-capitalization** automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace** determines whether to show the entire path formed by the letters you are sliding over to form a given word.
- **Speed vs. accuracy** sets how quickly Swype responds to your onscreen input. Move the slider between **Fast Response** (speed) or **Error Tolerance** (accuracy) and touch **OK**.

- **Word choice window** sets how often the word choice selection window appears onscreen. Move the slider between **Never** or **Always** and touch **OK**.
- **Swype help** to access Swype Help information and user manual.
- **Tutorial** provides access to onscreen Swype tutorials.
- **Version** displays the current software version.

Entering Text With the Onscreen Keyboard

Your Android Keyboard

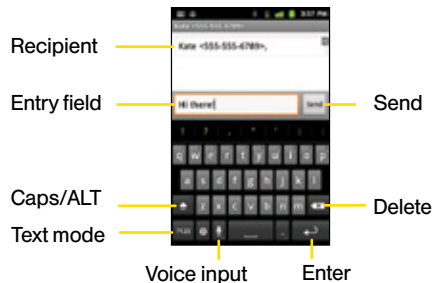



Text Entry with the Android Keyboard

Entering text with the onscreen Android QWERTY keyboard is easy: just tap the letters to type the words.


1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. With the Android keyboard as your text entry method, select one of the following text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard.

- **?123** to enter numbers by pressing the numbers on the onscreen keyboard. .
- **Voice Input** allows the device to use its built-in voice recognition software to hear your voice and transcript it directly into text.

3. Tap the corresponding onscreen keys to begin typing your word.

If you make a mistake, tap  to erase a single character. Touch and hold  to erase all previously entered words.

Your Android Keyboard Settings

Press  and tap **Settings > Language & keyboard > Android keyboard** to access the Android keyboard settings such as:

Vibrate on keypress, **Sound on keypress**, **Popup on keypress**, **Touch to correct words**, **Auto-capitalization**, **Show settings key**, **Voice input**, and **Input languages**.


Word suggestion settings include:

Quick fixes, **Show suggestions**, **Auto-complete**.

Use Your Device: Voicemail

Set Up Your Voicemail


All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press  and tap  > **Voicemail**.
2. Follow the voice prompts to create your password and record your name and greeting.

Voicemail Password
(do not share): _____

Sprint strongly recommends setting a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Retrieve Your Voicemail






- From the Home screen, tap  and tap **Voicemail**.

From any other phone:


1. Dial your wireless phone number.
2. When your voicemail answers, press **★**.
3. Enter your password.

Make and Answer Calls

Make a Phone Call

1. If the screen is locked, drag  to the right side of the screen.
2. Press  and tap  Phone.
3. Tap the digits of the number you want to call on the Phone keypad. (The number will appear just above the keypad as you enter it. Tap  to delete one or more digits.)
4. Tap .

Answer an Incoming Call

- Drag  to the right on the screen.

Send a Call Directly to Voicemail





- Drag  to the left.

Mute the Ringer on a Call


- To mute the ringer:
 - Press the volume down button.



Send a Text Message




1. Press  and tap  > **Messaging** .
2. Tap **New message**, or press  and tap **Compose**.
3. Enter a phone number, email address, or contact name in the To: field. (If the device recognizes a contact, you'll see a list. Touch the contact to complete the address.)
4. Tap **Type to compose** and then type your message.
5. When you are finished, tap **Send**.

Send a Picture or Video Message (Multimedia Messaging)

1. Follow steps 1 – 4 for sending a text message.
2. Press  and tap **Attach**.
3. Tap a media type (such as Pictures, Videos, Audio, etc.) and then tap an available album.
4. Tap a picture or clip to select it. (For Audio, tap **OK**.)
5. If you are satisfied with your message, tap **Send MMS**.

Note: For information on taking pictures and videos with your device, see "Camera & Camcorder" on page 20.

Access Messages

1. Press  and tap  > **Messaging** .
2. From the Messaging screen, tap the message you want to view.

–or–




1. Open the **Notifications** panel.
2. Tap the message you want to view.

All your text and MMS messages for a contact are collected in an ongoing “conversation,” so when you view a message, you can scroll through the entire history of your messages with that person.




Contacts

Your device's Contacts function lets you access and manage contacts from a variety of sources, including Google and Corporate email accounts, contacts synced from your computer, and old-fashioned contacts entered by hand.




Save a Phone Number

1. Press  and tap .
2. Enter a phone number using the onscreen keypad.
3. Press  and tap **Add to contacts > Create new contact**.
4. Tap **First name** and **Last name** fields, and enter a name for the new entry.
5. Tap **Mobile** (default) to select a label such as Home, Mobile, Work, Work Fax, Home Fax, Pager, Other, Custom, Callback, Car, Company Main, ISDN, Main, Other Fax, Radio, Telex, TTY TDD, Work Mobile, Work Pager, Assistant, or MMS.
6. Tap **Done** to complete and save the entry.



Retrieve a Phone Number

1. Press , tap  > **Contacts**, and then press .
2. Enter the first letter or letters of an entry.
3. Tap the contact to display the contact's phone number(s).

Add a New Entry to Contacts

1. Press , tap  > **Contacts**.
2. Press  and tap **New contact**.
3. Tap any field and use the onscreen keyboard to enter the name, phone number, and other contact details.
4. Add more data fields or a picture if desired, and tap **Done**.




Edit a Contact Entry

1. Press  and tap **Contacts** > [contact you'd like to edit].
2. Press  and tap **Edit contact**.
3. Tap an option:
 - [image icon] to assign a picture to the entry.
 - **First name/Last name** to edit the current name.
 - **Phone** to add or delete a phone number.
 - **Email** to add or delete an email address.
 - **Postal address** to enter a physical address for the contact. Choose from **Home**, **Work**, **Other**, or **Custom**.
 - **Organization** to enter business information such as a company name.
 - **More** to add additional categories such as **IM**, **Notes**, **Nickname**, **Website**, or **Internet call**.
4. Tap **Done** to save your updates.






Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location. Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®). The device can also be manually configured to connect to other email systems.

Set Up a Gmail Account






1. Press  and tap  > **Gmail** .
2. Follow the instructions to set up or sign in to a Gmail account.

Note: Although you need a Gmail account to use certain features such as Android Market, you do not have to use Gmail as the default account for your device.

Set Up a POP3/IMAP Email Account


1. Press  and tap  > **Email** .
2. Enter the Email address and Password for the email account.
3. Tap **Next** and follow on the onscreen instructions.

Set Up a Microsoft Exchange ActiveSync Account







1. Press  and tap  > **Email** .
2. Press  and tap **Accounts**.
3. Press  and tap **Add account**.
4. Enter your **Email address** and **Password** information and then tap **Next**.
 - Contact your Exchange Server administrator for required sign-in information.
5. Tap **Manual setup**.
6. Tap **Microsoft Exchange ActiveSync** (from the add email account screen).
7. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.
8. Enter a **Domain\Username**, **Password**, and **Exchange Server** information.

9. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
10. Configure your Email check frequency, Amount to synchronize (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.
11. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Access Email Messages

1. Press  and tap  > **Email**  or  > **Gmail** .
2. From the inbox, tap the message you want to view.





Send an Email Message

1. Press  and tap  > **Email**  or  > **Gmail** .
2. Press  and tap **Compose**.
3. Enter an email address in the **To:** field.
4. Enter a subject and a message.
 - To add attachments, tap **Attach** (on the bottom of the screen) and select an attachment.
5. Tap **Send**.



Camera & Camcorder







Take a Picture

1. Press  and tap  > **Camera** .
2. Using your display as a viewfinder, aim the camera lens at your subject, and press .

View Pictures



1. Press  and tap  > **Gallery**  to view the Camera folders.
2. Tap a picture and then tap **Menu** to explore other options, including sharing the picture using **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Picasa**, or **Wi-Fi**.

Record a Video

1. Press  and tap  > **Camera**  to activate camera mode.
2. Tap  to activate camcorder mode and select the recording mode.
3. Using the device's display screen as a viewfinder, aim the lens at your subject, and tap  or press  to begin recording.

 
4. Tap  or press  to stop recording.

View videos

1. Press  and tap  > **Gallery** .
2. Tap a video icon to view the video.




Share Pictures and Videos

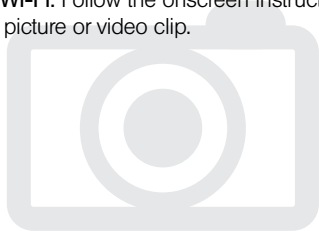1. Press  and tap  > **Gallery** .
2. Tap **Camera** to reveal your pictures and videos, and then press and hold a picture or video to send.
3. Tap **Share** and select a sharing option, such as **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Picasa**, **YouTube**, or **Wi-Fi**. Follow the onscreen instructions to send your picture or video clip.



Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

Go Online

1. Press  and tap  > **Browser**.
2. From the Sprint home page, select categories, navigate to websites, read blogs, download content, and more.
 - Tap a category to open it.
 - For more options, press  from any page. Options may include **New window**, **Bookmarks**, **Windows**, **Refresh**, (or **Stop**) and **Forward**. Tap **More** for additional options including **Add bookmark**, **Find on page**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch the screen.





Downloading Applications From the Web

You can download applications while browsing the Web, but you must first set permissions in settings to allow applications from unknown sources. Applications downloaded from Android Market (see page 23) do not require additional permissions.

1. Press  >  and tap **Settings** > **Applications**.
2. Select the **Unknown sources** check box.
3. When the Attention dialog box opens, read the disclaimer and tap **OK**.

Connect to a Wi-Fi Network

When you're in range of an available Wi-Fi network you can use your device's Wi-Fi feature to access the Internet and other data services.

1. Press  >  and tap **Settings**  > **Wireless & networks**.
2. Tap the **Wi-Fi** check box to turn Wi-Fi on.
3. Tap **Wi-Fi settings** to display a list of available networks.
4. Tap a Wi-Fi network to connect. If necessary, enter the security key and tap **Connect**.
 - When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon () in the status bar.





***Note:** When you're not using Wi-Fi, clear the Wi-Fi check box in the Wireless & networks settings page to extend battery life.*



Android Market

Android Market™ gives you access to more than 100,000 applications to boost your productivity and increase your fun.

Download Applications and Games

1. Press  and tap  > **Market** .
2. The first time you visit Android Market, tap **Accept** to accept the Terms of Service.
3. If not already logged in with your Google account, tap **Next**.
4. Tap **Sign in** and enter your Google account information.
5. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps** or **Games**.
 - Search for an app or game. Tap **Search** on the Android Market home screen, enter the name or key word, and then tap  to the right of the search box.
6. Tap an app or game to read a description and user reviews.

7. Tap **Free** (for free applications) or the price (for paid applications).







***Note:** You must have a Google (Gmail) account set up on your device to purchase and download applications from Android Market.*

Opening Installed Applications and Games

- Press  and tap . Locate the downloaded item and tap it to launch. You can also launch from the **Market** >  and tap **My apps** screen.

Google™ Mobile Services

Your Samsung Transform Ultra provides easy access to a variety of Google services including Gmail™, Google Talk™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail account lets you access many Google-related services as well as the Android Market. (See “Set Up a Gmail Account” on page 18.)
- **Google Talk** – Google’s instant messaging service. Press  and tap  > **Talk** to begin using the service. (If you’re signed in to your Gmail account, you are already signed in to Google Talk.)
- **Google Maps and Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Press  and tap  > **Maps** or **Navigation** to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Press  and tap  > **YouTube** to browse through and view available videos. Sign in with your Gmail account to upload your own videos.




Your Transform Ultra lets you use the preloaded Qik application to share live videos and have live mobile video chats with compatible mobile devices.

Set Up a Qik Account



Before using Qik Video on your device, you must create a Qik account and sign in on your device.

1. Press  and tap  > **Qik Video**.
2. Tap **Sign up** and follow the instructions to set up an account.




Qik Overview

1. Press  and tap  > **Qik Video**.
2. Tap **Log in** to sign in to your Qik account.
3. Press  and tap **Settings** to set your preferences, including sharing preferences, location settings, or video quality.
4. Select from the main Qik options: **Video Chat**, **Record & Share**, **Video Mail** or **Video Gallery**.





Live Mobile Video Chat With Qik

1. Press  and tap  > **Qik**.
2. Tap **Video Chat**.
3. Select a contact.
 - To complete a video chat, the contact must have a compatible wireless device and a Qik account.
4. Speak directly to your chat partner. Using the front-facing camera, you will see your image in one corner and the other party's image will cover the rest of the screen.




Pair and Connect With a Bluetooth®-Capable Device

1. Verify your Bluetooth is active. (Press  >  and tap **Settings** > **Wireless & networks** > **Bluetooth** to turn on Bluetooth. A green checkmark will appear.)
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. (Your device will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **OK**.
6. The external device will then have to also accept the connection and enter your device's PIN code.
7. Once you're paired with a device, your connection should launch. The  shows your current connection status.

Share Contacts, Files, or Pictures Using Bluetooth

1. Open the application containing the file you want to share (for example, press  and tap  > **Contacts** ).
2. Locate the file or entry you want to share.
 - You can send pictures and videos directly from the camera or from Gallery, Calendar events, Contacts (as vCards), music tracks, and voice recordings. Not all devices will be able to receive all file types.
3. Depending on the application, tap  > **Bluetooth** or press and hold the file and select **Share** (or **Send**) > **Bluetooth**.
4. Tap the name of the device to which you're sending the file. (If prompted, tap **Yes** to turn Bluetooth on.)

Open Your Music Player

- Press  and tap  > **Music** and follow the tutorial.
 - Music is stored by artists, albums, songs, and playlists. Tap a category, and then tap the song or playlist you want to play.
 - Press  and tap **Shuffle All** to randomly play all songs.

** You will need to load music onto the microSD card before you can listen to My Library. See "Getting Music".*

Getting Music

Before you can listen to your music, you need to load songs into the microSD card's Music folder.

1. Use the supplied USB cable to connect your device to an available USB port on your computer.
2. When you see the USB connected screen, tap **Mass storage > Turn on USB storage** and then touch **OK**.
3. On your computer, locate the new removable disk, open it, and open or create a Music folder.
4. Copy music files from your computer to the music folder, follow the procedures to safely remove the drive, and then disconnect the device from the USB cable.

Sprint Applications



Access additional exclusive Sprint features right from your phone when you install the Sprint ID Pack.

Install the Sprint ID Pack

1. Press  and tap  > **Get New**.
2. Tap **Sprint** and follow the onscreen prompts to download and install the **Sprint ID Pack**.




Sprint Zone

Enhance your Sprint experience. The free Sprint Zone application makes it a snap to manage your account, get tips and tricks for your device, find recommended apps, and more.

1. Press  and tap  > **SprintZone**.
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.



Sprint Music

In addition to the Music application, your phone offers Sprint Music Plus, an all-in-one music store and player for full songs, ringtones, and ringback tones.

1. Press  and tap  > **Sprint Music Plus**.
2. Tap **My Library** to access all your music, including items you have purchased or loaded onto your phone's microSD card.
3. Tap **Downloads** to access your list of downloaded music.
4. Tap **Music Store** to access the music store, where you can search for, sample, and purchase DRM-free music. Tap **Ringtone Store** or **Ringback Tone Store** to find and purchase new ringtones and ringback tones for your phone.
5. For more information, press  and tap **More** > **Help & About**.

Sprint Hotspot

Set Up Your Sprint Hotspot

1. Press  and tap  > **Sprint Hotspot**.
2. Tap **OK** on the introduction screen.
3. Tap **Sprint Hotspot** to activate the hotspot.



Connect to the Sprint Hotspot

1. Activate Wi-Fi on the other device.
2. Scan for Wi-Fi networks from the device and select your Transform Ultra hotspot from the network list.
 - The default name for your Transform Ultra hotspot is **SPH-M930XXX**. You can change the name by tapping **Sprint Hotspot Settings > Router name** from the Sprint Hotspot screen.
3. Connect by entering the key that appears on the Sprint Hotspot screen.
4. When “Connected” appears on your device, launch your Web browser to confirm you have an Internet connection.

Sprint TV and Movies

Live TV and video on demand. Complete episodes and clips of your favorite primetime shows and movies. Over 50 channels of news, entertainment, weather, sports, and streaming music.



Sprint TV & Movies

1. Press  and tap  > **Sprint TV & Movies**.
2. In the top bar, touch **Home**, **Live TV**, **On Demand**, **Movies**, or **Shop** to find what you want to watch.
 - For quick access, touch a featured item in the center of the screen or select a live option in the bottom bar.

Visit sprint.com/tvguide for more information on channels and pricing.

Sprint Radio

Listen to streaming music through your phone's Sprint Radio application.

1. Press  and tap  > **Sprint Radio**.
2. Tap **Sprint Radio** > **Go** to browse by genre, region, or features. Sprint Radio Extra (available by subscription) offers additional features, music videos, and more.

NASCAR Sprint Cup Mobile



Keep up to date with your favorite drivers and all the news and live feeds from the world of NASCAR.

1. Press  and tap  > **NASCAR**.
2. Select a favorite driver to get started.

Tip: For additional Sprint applications and features, select the Sprint option on the Android Market home page.



Sprint Football Live

Get Sprint Football live on your device. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.


1. Press  and tap  > **Sprint Football Live**.
2. Tap the **PRO** or **COLLEGE** tab on the Sprint Football Live home page to access features such as **My Team, Draft Central, Scores and Schedules, News and Analysis, Team Pages, Standings, Statistics, Twitter, Odds, Fantasy, Videos and Photos, or Settings/Help**.

GPS Navigation

TeleNav™ GPS Navigator lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, stores, banks, or gas stations. Get information about traffic and alternate routes.

1. Press  and tap  > **TeleNav GPS Navigator**.
2. Follow the onscreen instructions to access, launch, and use.

***Note:** Before using any navigation programs, make sure your device is set to allow location detection, and then select which sources you want to use.*

*Press  and tap **Settings > Location & security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources.*

Tools & Resources: Settings

Explore ways to customize your device, set permissions, update your phone, and more in the **Settings** menu.

Accessing Settings

1. Press  and tap  > **Settings**.

– or –

Press  >  and tap **Settings**.

 
2. Select the settings category you want to change. To select or clear check boxes (a common setting method), tap the check box.

Categories include:

- Wireless & networks
- Call settings
- Sound
- Display
- Location & security
- Applications
- Accounts & sync



- Privacy
- Storage
- Language & keyboard
- Voice input & output
- Accessibility
- Date & time
- About phone

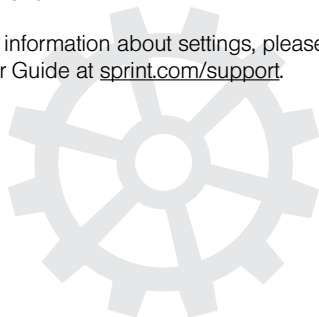For detailed information about settings, please see the User Guide at sprint.com/support.



Battery-Saving Tips





Manage the Display Brightness and Screen On-Time

1. Press  >  and tap **Settings > Display > Brightness** to modify the backlight setting as desired.
2. To turn off the screen, tap the Power button. The device will continue to function.
— or —

Add a Power Control widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)

Manage Your Device's Wireless Functions

Disable the Sprint Mobile Hotspot, Wi-Fi, Bluetooth, and GPS functions of the device when you're not using them.

- Press  >  and tap **Settings > Wireless & networks** and disable any of these functions that are not in use.
— or —
- Press  >  and tap **Settings > Locations & security** and disable any My Location options that are not in use.
— or —
- Add a Bluetooth, GPS, and Wi-Fi widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)












For more useful tips about battery care and safety, see the *User Guide* at www.sprint.com/support.




Manage Your Account

Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

From Your Sprint Phone

- Press    to check minute usage and account balance.
- Press    to make a payment.
- Press    or press  and tap  > **Sprint Zone** to access Sprint Zone for account services, Sprint news, phone information, suggested applications, and more.

- Press    to add a new line of service, upgrade your device, purchase accessories, or access other account services.

From Any Other Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Helpful Sprint Information

Total Equipment Protection

The protection you need so you can be worry free

Should anything happen to your phone, you'll have a worry-free way to ensure that you get connected again soon.

- **Coverage includes:**

Loss, theft, routine maintenance, physical or liquid damage, mechanical or electrical problems, failure from normal wear and tear.

- **For more information:**

See the Total Equipment Protection brochure available at any participating retail location or go to sprint.com/tep for more details. To enroll within 30 days of activation, call **1-800-584-3666**.

Total Equipment Protection is a service provided by Asurion Protection Services, LLC, Continental Casualty Company's (a CNA company) licensed agent for the customers of Sprint.

Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See sprint.com for pricing and details.

Be a hero. Don't drive distracted.





Focus on driving

sprint.com/focusondriving

Resources

Resources For Your Phone

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your Transform Ultra.
- **SprintZone** – Press  and tap  > **SprintZone** to access account services, Sprint news, phone information, suggested applications, and more.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your Samsung Transform Ultra.

Survey

We are interested in your initial impressions of this new Sprint phone. Within two weeks of your phone purchase, please go to the website <http://labs.sprint.com/sprintphonesurvey> to complete a brief survey. Your feedback will help us provide the wireless features and services you want most.

Thank you for choosing Sprint.

A

- Activate 2
- Android Market 23
- Answering a Phone Call 14
- Applications
 - Access 9
 - Download 21
 - Open 9

B

- Battery
 - Charge 1
 - Install 1
- Battery Saving Tips 33
- Bluetooth 26
- Buttons 8

C

- Camera
 - Share pictures 20
 - Take a picture 20
 - View a picture 20

Contacts 16-17

Add 16

Edit 17

D

- Drag screen 5

E

- Email
 - Access 19
 - Gmail 18
 - Microsoft Exchange ActiveSync 18
 - POP3/IMAP 18
 - Send 19

F

- Flick screen 4

G

- Games 23
- Gestures 4-5
- Gmail 18
- Google Maps 24
- Google Navigation 24
- Google Talk 24

H

- Home Screen 6
 - Add Items 7
 - Customize 7
 - Extended 6
 - View 6

I

- Internet 21

K

- Keyboard 10-12
- Keys 8

M

- Making a Phone Call 14
- Maps 24
- Microsoft Exchange ActiveSync 18
- Music 27
- Mute 14
- Multimedia Messages 15

N

- NASCAR 30
- Navigation 31

P

- Phone Call
 - Answering 14**
 - Making 14**
- Phone Number
 - Save 16**
 - Retrieve 16**
- Picture Messages 15
- Pictures
 - Take 20**
- Pinch 5
- Predictive Text 11
- Press and hold 4

Q

- Qik 25
 - Video Chat 25**
- QWERTY Keyboard 10

R

- Rotate Screen 5
- Resources 36

S

- Settings 31
- Screen
 - Turn On and Off 1**
 - Unlock 1**
- Shortcuts 7
- Slide 5
- Sprint Football Live 31
- Sprint Customer Service 32
- Sprint ID 3
- Sprint Mobile Hotspot 29
- Sprint Music 28
- Sprint Radio 30
- Sprint TV and Movies 29
- Sprint Zone 28, 34
- Status Bar 6
- Swype 5, 10-11

T

- Tap 4
- TeleNav GPS Navigator 31
- Text Messages 15
- Total Equipment Protection 35

U

- Unlock Screen 1

V

- Video Chat 25
- Videos
 - Record 20**
 - Share 20**
- Voicemail 13

W


- Wallpaper 7
- Web 21
- Widgets 7
- Wi-Fi 22

Y

- YouTube 24

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. See www.sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This device is capable of determining its/your geographical location. To set controls for access and use of your location information by others, press  and tap **Settings > Location & security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a device must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2011 Sprint. SPRINT and the logo are trademarks of Sprint. Other marks are property of their respective owners. Samsung and Transform™ Ultra are trademarks of Samsung Electronics America, Inc. and/or its related entities. Other marks are property of their respective owners. Screen images simulated.

Printed in China

GH68-35034A